


sidekick™ by LENSPEIN®

CLEANING INSTRUCTIONS

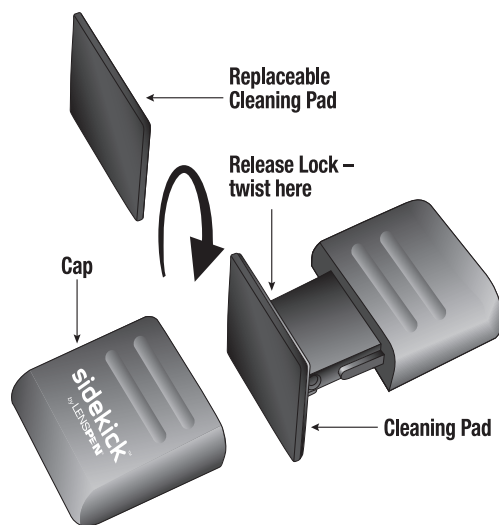

1. Slide out the Cap to release the **SideKick™** Cleaning Pad.
 2. Clean away any fingerprints on the screen using the Cleaning Pad.
 3. If some smudges persist, breathe gently on the area to be cleaned and repeat the process.
 4. Slide the Cap over the Cleaning Pad.
 5. When required, replace the Cleaning Pad by pressing the Release Lock, then twist the old Cleaning Pad out and twist the new Cleaning Pad in.
- IMPORTANT:** Do not use on wet surfaces.