

# LENSPEN® DIGIKLEAR®

## INSTRUCTIONS FOR USE



- 1.** Remove any particles on the display surface with the Retractable Brush.
- 2.** Twist off the Cap and wipe the display surface with smooth circular motions of the Cleaning Tip. Twist the Cap back on. If some smudges persist, breathe gently on the surface and repeat the process.

### IMPORTANT

Lenspen® DigiKlear® is designed specifically for cleaning dust and fingerprints on digital LCD displays. **Do not use on wet or plastic surfaces.** Please carefully observe the instructions for use.